

## Thule Strolling Kit

# ➤ Instructions

## PARTS DESCRIPTION



Two pivoting  
caster wheels

## GENERAL WARNING

These instructions contain many WARNINGS. Read and understand all of the WARNINGS. Failure to assemble and use this Thule child carrier correctly may lead to serious personal injury or death to you or your passenger.

- When the Thule child carrier is used as a Bicycle Trailer, the stroller wheels must never be installed in their in-use position (wheels down). They may only be carried in their out-of-use position (wheels up).
- To prevent the Thule child carrier from tipping backwards, the storage bags at the rear of the carrier must not be loaded with excessive weight. Carry out the following check while the carrier is standing on a flat surface:

- Tip the Thule child carrier backwards by about 15cm/6in. The Thule child carrier should return to its original standing position and should not tip backwards. A maximum combined load of 4kg/8.8lb is allowable in all the rear storage bags together if no Thule console is being used.
- The maximum allowable load of the Console is 1kg/2.2lb. The maximum allowable load of the other rear storage bags is reduced to 2kg/4.4lb if the Thule console is loaded with 1kg/2.2lb.
- The Thule Strolling Kit is not suitable for inline skating or jogging.

## 1.1 INSTALLING THE THULE STROLLING KIT



- A. Press and hold in the caster button on one of the VersaWings™. (See image 1)
- B. Insert the caster shaft up into the caster hole. (See image 2)
- C. Release the caster button.
- D. Verify that the caster wheel is securely attached to the Thule child carrier by giving it a sharp pull downward.



### WARNING

Always make sure that the stroller wheels are properly and fully engaged and locked. To check this move the stroller wheels up and down in a vertical direction. Make sure the plastic locking button has fully clicked back out.

### NOTICE


It is recommended that wheel shafts be checked regularly. If loose shafts are noticed, it is recommended to service the kit. Refer to the next page for servicing instructions.

## 1.2 STORING THE THULE STROLLING KIT




- A. Press the caster button on one of the VersaWings™ and insert the caster shaft from the top down into the caster hole. (See image 3)
- B. Repeat for the other caster wheel.
- C. Removal is the opposite to installation.
- D. Verify that the caster wheel is securely attached to the Thule child carrier by giving it a sharp pull upward.

### 1.3 SERVICING THE THULE STROLLING KIT

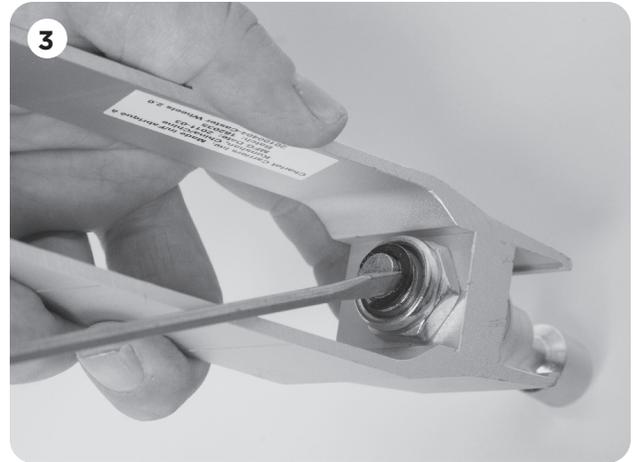

- A. Remove the caster wheel from the chassis.
- B. Slide the large o-ring off of the axle. (See image 1)
- C. Using the Phillips head screwdriver and 13mm/1/2in wrench, remove the bolt through the wheel and take the wheel off. (See image 2)
- D. Using a small straight-blade screwdriver, pry the c-clip off of the axle and pull the axle out. (See image 3)
- E. With the small straight blade screwdriver, dig under the small o-rings and slide the o-rings off of the axle. (See image 4)

### 1.3 SERVICING THE THULE STROLLING KIT (CONTINUED)

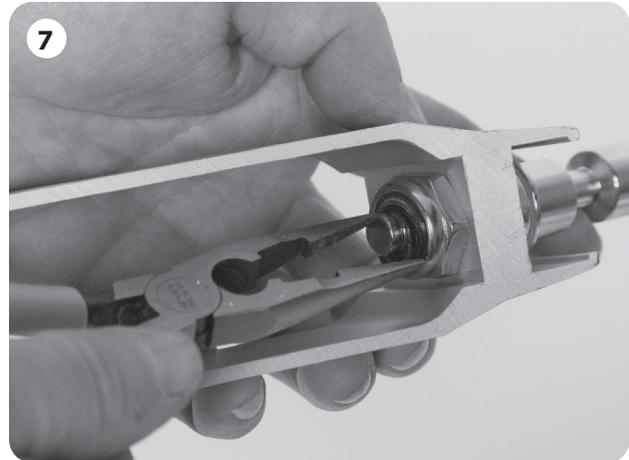

- I. Put the wheel back on and tighten the bolt through it.
- J. Slide a large replacement o-ring onto the axle.

- F. Lightly grease two of the small replacement o-rings and the axle.
- G. Fit the two small replacement o-rings onto the axle in the same positions as the previous ones. Do not use any tools to prevent damaging the o-rings. (See image 5)
- H. Reinstall the axle; slide a replacement c-clip back onto the axle and snap it in place using pliers. (See images 6 & 7)